

QUICK START GUIDE: Super SolarFlex

Getting Started with Solar

1. OEM & Super SolarFlex Battery Disconnect into the "On" position.

Battery heat and disconnect switch can be found by remote center.



2. If you're NOT plugged into Shore Power, turn on inverter using the Magnum ME-RC.

3. Download the VictronConnect App.

Turn on Bluetooth to connect with products. Pair all products with app and then select your BMV-712. Confirm settings.

Default pin code is 000000. After connecting, the pin code can be changed by going into "Settings" (*), select "Menu" (:), "Product Info", and here, you can change the product name and pin code.

Battery settings	
Battery capacity	510Ah
Charged voltage	14.1V
Discharge floor	0%
Tail current	3.50%
Charged detection time	3m
Peukert exponent	1.05
Charge efficiency factor	99%
Current threshold	0.10A
Time-to-go averaging period	3m
Battery starts synchronized <input type="checkbox"/>	
Battery SOC after a reset will be 100%	
State-of-Charge	94.8%
Manually set the current state-of-charge	
Synchronize SOC to 100%	SYNCHRONIZE
Zero current calibration	CALIBRATE



4. Remotes to Live By

See user manuals for more information.



User Manual



User Manual



User Manual



User Manual



5. For more information, see our Basic User Guide.

